



NO	ART. NO	DESCRIPTION	NO	ART. NO	DESCRIPTION
1	14011	STOCK GLADIATOR GRIP	31	11500	HAMMERSPRING
2	BK38	O-RING	32	11023	HAMMER
3	14012	PLASTIC MAG. PIN SLIDER	33	12005	SPRING
4	11030	HAMMERSPRING ADJ. .177	34	11514	PIVOT PIN
5	11512	BRASS CAP M8	35	11025	PELLET PROD .22
6	11048	PELLET PROD .177	36	13002	MAGAZINE PIN
7	14000	AIR BOTTLE BRASS END	37	2508	SCREW
8	2023	VALVE SEAT	38	11018	SIDELEVER WASHER
9	11010	AIR CYLINDER VALVE PIN	39	12028	SIDELEVER BEARING
10	2525	SPRING	40	11034	SIDELEVER
11	11013	AIR CYL. BRASS END NUT	41	11016	SIDELEVER HANDLE
12	11540	HAMMERWEIGHT .22	42	BK112	O-RING
13	14010	STOCK GLADIATOR REAR	43	11051	MAGAZINE .177
14	2082	NUT	44	11050	MAGAZINE .22
15	11526	BUTTPAD	45	11045	BARREL HOUSING
16	5103	O-RING	46	BK51	O-RING
17	5508	AIR BOTTLE 500CC	47	BK38	O-RING
18	11546	SCREW	48	12006	BARREL .22 - 14MM
19	2020	TRIGGER BLADE	49	11038	MUZZLE END CAP 14MM
20	11531	WASHER	50	11516	INDEX LEVER CONNECTOR
21	11015	ADJUSTSCREW M5	51	12030	BARREL .177 - 14MM
22	2500	SCREW	52	11041	INDEX LEVER
23	2063	TRIGGER SPACER	53	2520	SPRING
24	11042	SPRING GUIDE	54	11057	SIDEPLATE FX GLADI. .22
25	11524	TRIGGER BASE	55	2504	SCREW
26	11525	TRIGGER WHEEL	56	11058	SIDEPLATE FX GLADI..177
27	11504	SPRING	57	11626	SPACER 4.7 - 4.8 - 4.9 - 5.0
28	12033	SCREW	58	14005	AIR CYL. CONNECTOR
29	14008	AIR BOTTLE CONNECTOR	59	11020	POWER ADJUSTER
30	11541	HAMMERSPRING ADJ. .22	60	11011	MAIN VALVE PIN

NO	ART. NO	DESCRIPTION	NO	ART. NO	DESCRIPTION
61	BK5	O-RING	91	14016	BRASS WASHER
62	11505	PRESSURE GAUGE	92	14017	BRASS CAP
63	11535	AIR CYLINDER 400MM	93	2029	MAGAZINE STOP
64	11507	RUBBER/STEEL WASHER	94	2040	PLASTIC VALVE SEAL
65	11502	PIVOT PIN	95	2041	VALVE SEAL HOLDER
66	14013	COPPER PIPE	96	BK108	O-RING
67	14014	CONNECTOR M8	97	2023	VALVE SEAT
68	11024	AIR CYLINDER 330MM	98	2056	BRASS BARREL INLET .22
69	BK126	O-RING	99	2045	BARREL 12MM 5.5 CARBINE
70	2057	BRASS BARREL INLET .177	100	11528	AIR TRANSF. PORT 2.0
71	11029	AIR CYL. END [ALUMINIUM]	101	11536	AIR TRANSF. PORT 4.6
72	BK14	O-RING		BK51	O-RING FILLING PROBE
73	12011	INLET VALVE			
74	11035	AIR CYLINDER END [BRASS]			
75	5204	SPRING			
76	11031	TRIGGER SEAR			
77	11528	AIR TRANSFER PORT 1.5			
78	4066	STEEL BALL			
79	11503	SPRING			
80	11527	STEEL BALL			
81	11501	SPRING			
82	BK40	O-RING			
83	11027	SAFETY PIVOT			
84	11044	BODY			
85	11200	SAFETY KNOB			
86	11017	AIR CYLINDER INLET END NUT			
87	11625	SAFETY PIN			
88	5005	PLASTIC WASHER 2MM			
89	11644	MAGAZINE PIN KNOB			
90	14015	PLASTIC WASHER			

Spare parts available at:

spares.bagnallandkirkwood.co.uk

For spare parts not listed please contact us using the reference codes above