





Spare parts available at:
spares.bagnallandkirkwood.co.uk

For spare parts not listed please contact us using the reference codes above

Location	Article number	Description	Location	Article number	Description
A1	18025	Outer tube v6	H7	2500	Screw
A2 - 4,5	16017-1	Airtube 390 (drilled)	H8	11015	Trigger adjuster 2-stage
A2 - 5,5	16017-2	Airtube 390	H9	2020	Trigger
B1 - 4,5	2633	Barrel 4,5	I1	BK126	O-ring
B1 - 5,5	2629	Barrel 5,5	I2	18017	Valve offset
C1 - 4,5	17023	Muzzle 4,5	I3 - 4,5	18011	Valve spring lid 4,5
C1 - 5,5	17000	Muzzle 5,5	I3 - 5,5	18037	Valve spring lid 5,5
C2	18023-1	Plastic Pipe Short Split	I4	10630	Spring
C3	18033	Spring	I5	2040	Valve Seal
C4 - 4,5	18022	Spring guide 4,5	I6	2041	Valve Seal Holder
C4 - 5,5	18021	Spring guide 5,5	I7	2022	Mail valve stem
C5	18023-2	Plastic Pipe Short Hole	I8	BK5	O-ring
C6 - 4,5	10837	Washer Reloading 4,5	I9	2023	Valve Seat
C6 - 5,5	18040	Washer Reloading 5,5	I10	BK38	O-ring
C7	18023-2	Plastic Pipe Short Hole	I11	BK91	O-ring
D1	2534	Screw	I12	18014	Main Valve Housing
D2	2534	Screw	I13	BK79	O-ring
D3	BK89	O-ring	J1	11017	Air tube end Inlet Nut
D4	18016	Brass bushing	J2	2524	Spring
D5	18019	Spring for Reloading	J3	12011	Inlet Valve
D6	18024-2	Plastic 16 Pipe Short	J4	BK14	O-ring
D7	BK128	O-ring	J5	BK136	O-ring
D8	2534	Screw	J6	18018	Barrel support ring
D9	2534	Screw	J7	BK136	O-ring
D10	BK128	O-ring	J8	BK126	O-ring
D11	2534	Screw	J9	11029	Air Cylinder End Inlet
D12	18013	Brass Air Bushing	J10	2637	Screw
D13	10828	Piston Ring	J11	11506	Screw
D14	18015	Reloading Piston	J12	12036	Barrel support base
D15	18024-1	Plastic 16 Pipe Long	K1	18035	Reloading rod
D16	18012	Steel bushing	K2 - 4,5	18006	Pellet probe 4,5
E1	-	Stock	K2 - 5,5	18007	Pellet probe 5,5
F1	BK51	O-ring	K3	18044	Rotating spring
F2	BK51	O-ring	K4	18008	Bolt attachment
F3	18034	Screw M6x45	K5	18039	Cylindrical Pin
F4 - 4,5	18000	Barrel housing 4,5	K6	11023	Hammer
F4 - 5,5	18001	Barrel housing 5,5	K7 - 4,5	18029	Hammer weight 4,5
F5	16023	Steel pin	K7 - 5,5	18030	Hammer weight 5,5
F6	-	Piano wire trigger	K8	18038	Hammer spring
F7	16023	Steel pin	K9	17006	Hammer adjuster
G1	-	Reset pin v6	K10	18004	Cocking bolt
G2	18002	Reset axle	K11	2527	Screw
G3	12035	Screw	K12	18005	Probe and hammer aligner
G4	17018	Spring	L1	BK5	O-ring
G5	17040	Reset screw	L2	BK5	O-ring
G6	2637	Screw	L3	18003	Safety rod
H1	11525	Trigger Wheel	L4	2035	Short Handle
H2	17017	Trigger Base	M - 4,5	Separate list	Only 4,5 (regulator)
H3	2500	Screw	N1,2	2501	Screw
H4	2527	Screw	N3	2503	Screw
H5	18009	Trigger Sear	NOT SHOWN	BK51	Fill Probe O Ring
H6	17046	Spring			

Spare parts available at:

spares.bagnallandkirkwood.co.uk

For spare parts not listed please contact us using the reference codes above