



1-27	Grip Spring	1
1-28	Grip Catch Spring(Back)	1
1-29	Screw	1
1-30	Grip Catch Spring(Front)	1
5-01	Built-in Mag. Body	1
5-02	SB Follow	1
5-03	Mag. Spring	1
3 Internal Barrel Combination		
3A-01	Barrel Seat(L)	1
3A-02	Barrel Seat(R)	1
3A-03	Ejector(L)	1
3A-04	Ejector(R)	1
3-05	Ejector Spring	1
3-06	Internal Barrel	1
3-08	Screw	2
3-09	C Washer	1
3-11	Screw	1
7 Valve Combination		
7-01	Valve Ring	1
7-02	Valve Seal	1
7-03	Piercer Seal	1
7A-04	Valve Chamber	1
7A-05	Valve Cover	1
7-06	Valve Spring	1
7-07	Valve	1
7-08	Copper Ring	1
7-09	Filter	1
7-10	Piercer	1
7-11	Fixing Ring	1
BA Knob Combination		

1-01	Frame(L)	1
1-02	Frame(R)	1
1-03	Grip	1
1-04	Trigger	1
1-05	Grip Catch	1
1-06	Muzzle	1
1-08	Safety	1
1-09	Safety Parts	1
1-10	Safety Spring Seal	1
1A-01	Recall Spring Stopper	1
1A-02	Fixing Guide	1
1A-03	BB Housing	1
1-11	Axis	1
1-12	Screw	8
1-13	Recall Spring	1
1-20	BB Stopper Spring	1
1-21	Fixing Guide Spring	1
1-22	Trigger Spring	1
1-23	Safety Spring	1
1-25	Attacked Block	1
1A-26	SB Stopper	1

Spare parts available at:
spares.bagnallandkirkwood.co.uk
 For spare parts not listed please contact us using the reference codes above