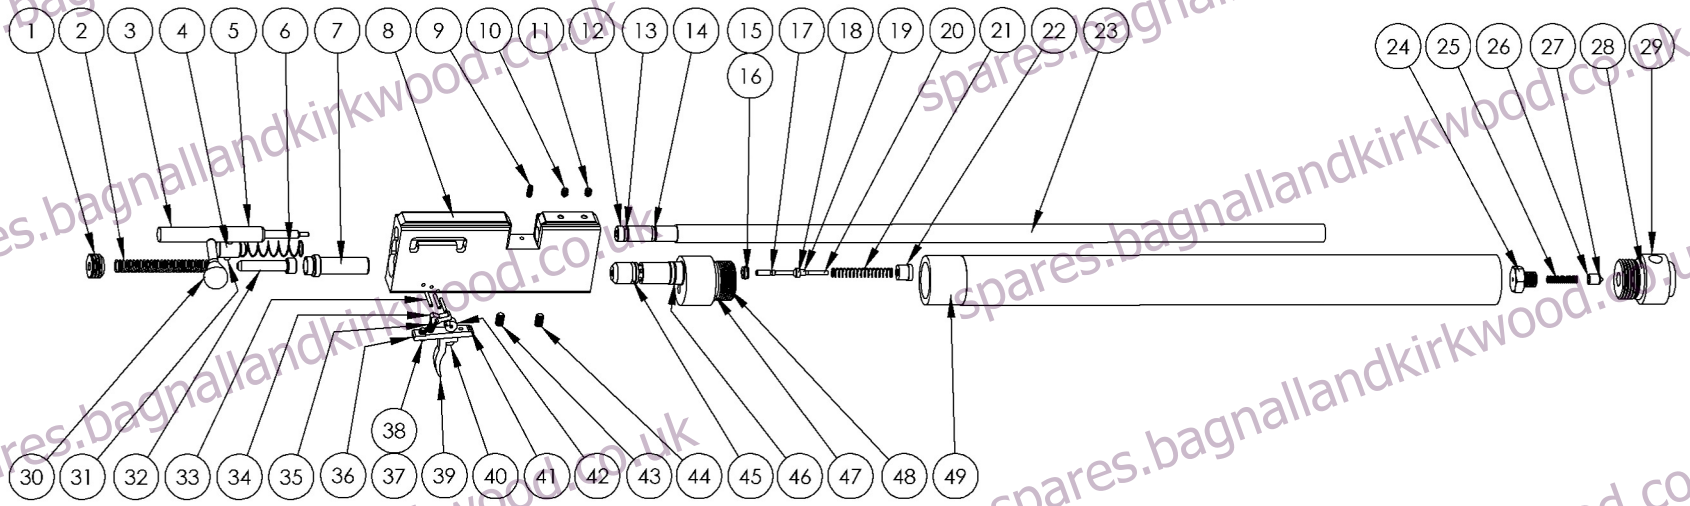

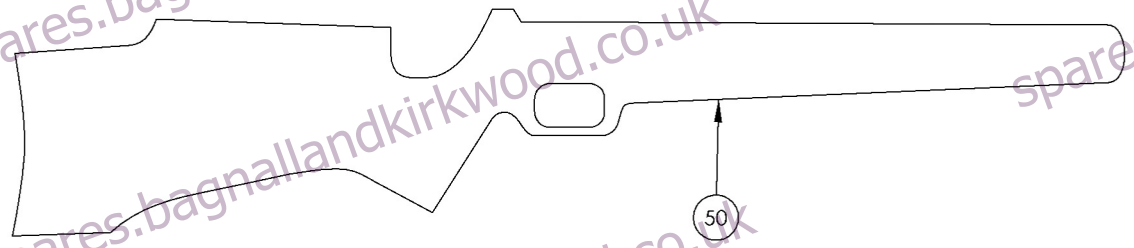

spares.bagnallandkirkwood.co.uk

Spare parts available at:
spares.bagnallandkirkwood.co.uk
For spare parts not listed please contact us using the reference codes above

Location	Article number	Description	Location	Article number	Description
1 Lo	11031 < 16 Joule	Spring Adjuster	44	2508	Screw
1 Hi	11541 > 16 Joule	Spring Adjuster	45	BK79	O-ring
2	16024	Spring	46	BK91	O-ring
3	16007	Bolt attachment	47	BK126	O-ring
4	16005	Probe and hammer aligner	48	16009	Main Valve Tube End
5 - 4,5 Lo	16006-2 < 16 Joule	Pellet probe 4,5 Steel	49	16017	Air tube 390
5 - 4,5 Hi	16006-1 > 16 Joule	Pellet probe 4,5 Brass	50		Stock
5 - 5,5	16008-1	Pellet probe 5,5 Steel	NOT SHOWN	BK51	Filling Probe O Ring
6	16025	Spring Return	NOT SHOWN	BK38	Breech O Ring .177
7	11023	Hammer	NOT SHOWN	BK51	Breech O Ring .22
8 - 4,5	16022	Barrel Housing 4,5			
8 - 5,5	16015	Barrel Housing 5,5			
9		Screw			
10	2637	Screw			
11	2637	Screw			
12 - 4,5	2057	Barrel Brass Inlet 4,5			
12 - 5,5	2056	Barrel Brass Inlet 5,5			
13	BK51	O-ring			
14	BK51	O-ring			
15	BK38	O-ring			
16	2023	Valve Seat			
17	BK5	O-ring			
18	2040	Valve Seal			
19	2041	Valve Seal Holder			
20	2022	Valve pin			
21	16030	Valve Spring			
22	16002	Valve spring lid			
23 - 4,5	12030	Barrel 4,5			
23 - 5,5	12006	Barrel 5,5			
24	11017	Air tube end Inlet Nut			
25	2524	Spring			
26	12011	Inlet Valve			
27	BK14	O-ring			
28	BK126	O-ring			
29	11029	Air cylinder end			
30	16004	Cocking Bolt			
31	16003	Alignment pin			
32 Lo	16026 < 16 Joule	Steel Washer			
32 Hi	11540 > 16 Joule	Hammer weight			
33	16023	Steel pin			
34	11031	Trigger Sear			
35	11504	Spring 1-stage			
36	11524	Trigger base			
37	11015	Trigger adjuster 2-stage			
38	2500	Screw			
39	2020	Trigger			
40	2527	Screw			
41	2500	Screw			
42	11525	Trigger wheel			
43		Stock Screw			

Spare parts available at:
spares.bagnallandkirkwood.co.uk
For spare parts not listed please contact us using the reference codes above