Spare parts available at:
spares.bagnallandkirkwood.co.uk
For spare parts not listed please contact us using the reference codes above

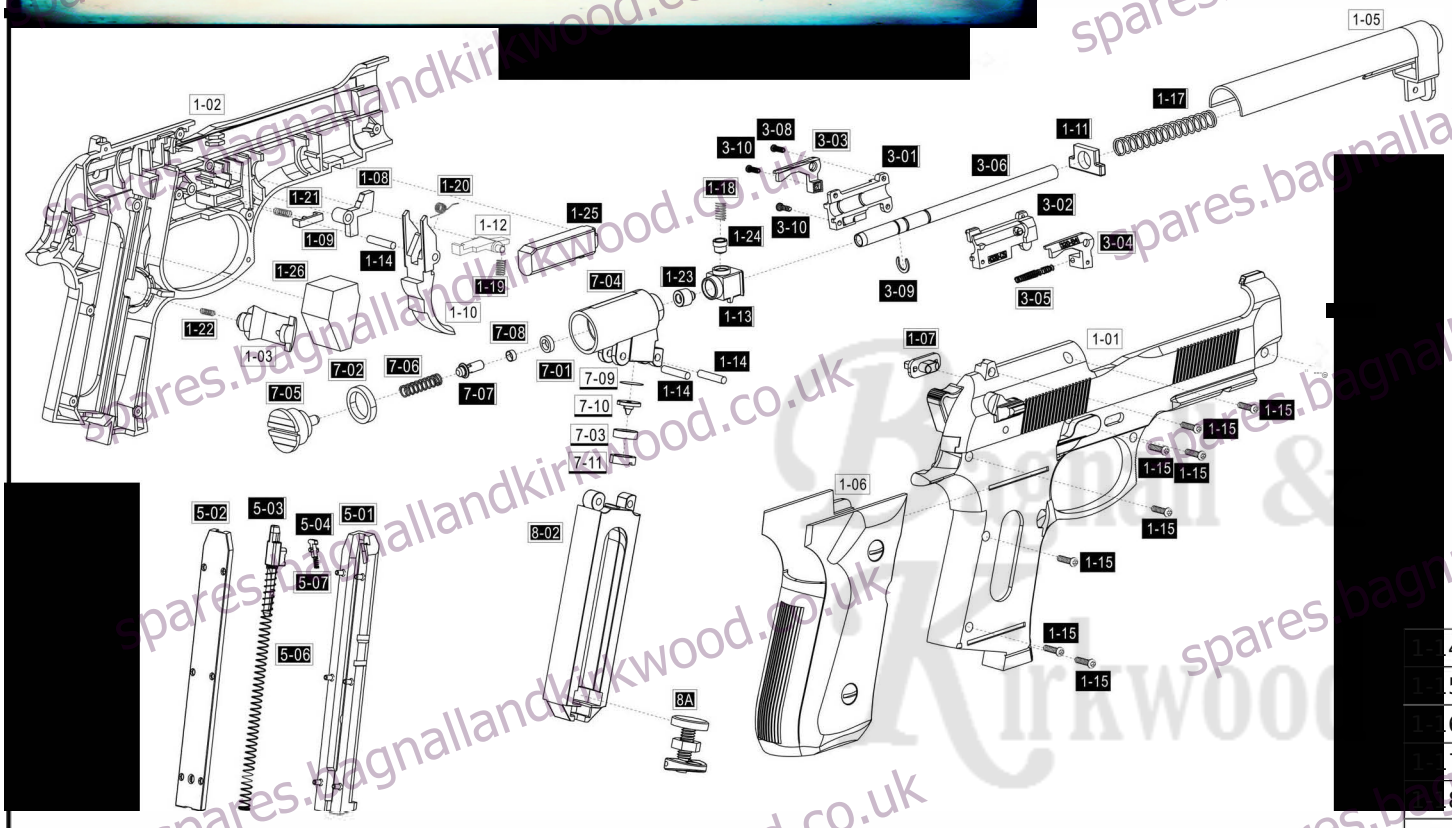

5.8090 Beretta Elite II

1-01	Frame(L)	1	1-08	Safety Parts	1	1-21	Safety Spring	1	7-07	Valve	1
1-02	Frame(R)	1	1-09	Safety Spring Seal	1	1-22	Mag. Catch Spring	1	7-08	Copper Ring	1
1-03	Mag. Catch	1	1-10	Trigger	1	1-23	Attacked Block	1	7-09	Filter	1
1-05	Outer Barrel	1	1-11	Recoil Spring Stopper	1	1-24	BB Stopper	1	7-10	Piercer	1
1-06	Grip	1	1-12	Fixing Guide	1	1-25	Heavy Weight(Front)	1	7-11	Fixing Ring	1
1-07	Safety	1	1-13	BB Housing	1	1-25	Heavy Weight(Back)	1	**8A**	**Knob Combination**	1
1-14	Axis	1									
1-15	Screw	8									
1-16	Screw	1									
1-17	Recoil Spring	1									
1-18	BB Stopper Spring	1									
1-19	Fixing Guide Spring	1									
1-20	Trigger Spring	1									

3	**Interna! Barrel Combinalion**	
3-01	Barrel Seat(L)	1
3-02	Barrel Seat(R)	1
3-03	Ejector(L)	1
3-04	Ejector(R)	1
3-05	Ejector Spring	1
3-06	Interna! Barrel	1
3-08	Screw	1
3-09	C Washer	1
3-10	Screw	2
5	**Mag. Combination**	**1**
5-01	Mag. Body	1
5-02	Mag. Cover	1
5-03	BB Follower	1
5-04	BB Guide	1
5-06	Mag. Spring	1
5-07	BB Guide Spring	1
7	**Valve Combination**	**1**
7-01	Valve Ring	1
7-02	Valve Seal	1
7-03	Piercer Seal	1
7-04	Valve Chamber	1
7-05	Valve Cover	1
7-06	Valve Spring	1